



Converting Your Le Griddle to Natural Gas




Your new Le Griddle arrives configured to operate on propane (LP) gas. To convert it to natural gas please follow these simple steps. The normal pressure for natural gas must be 7" WC.

Stop Valve Installation:


1 - Remove:

- Plastic knob
- Washer on valve axis
- Bottom screw

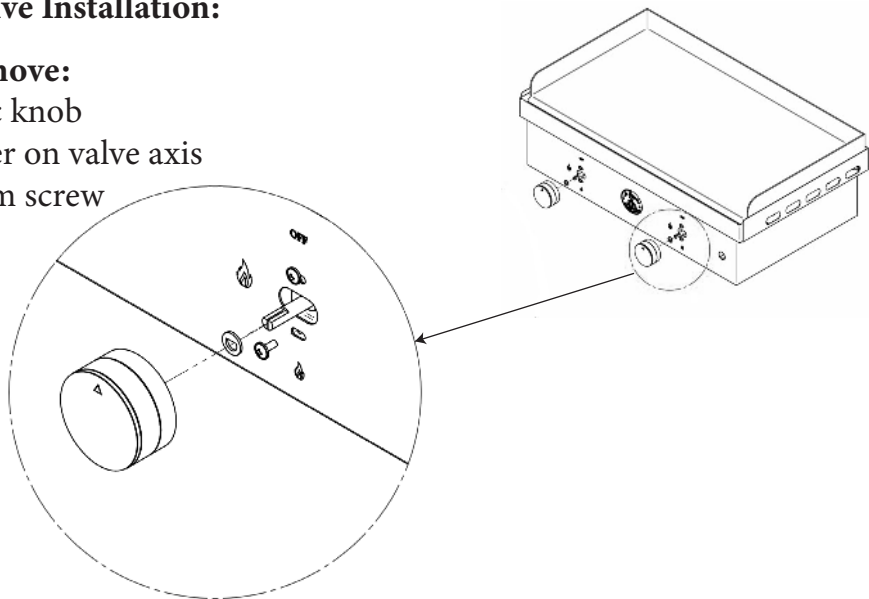

2 - Install:

- Add (2) 5mm washers onto the bottom screw you removed and then replace screw.
- Slide valve stop onto valve as shown. *This replaces the washer you removed*
- Carefully push plastic knob back onto valve.
- Repeat for each knob

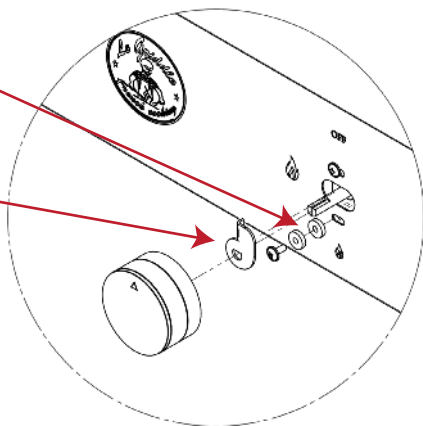

LeGriddleUS.com


Orifice Installation:

Read instructions fully before beginning.

Make sure unit is not connected to gas supply.

1. Remove drip tray
2. Remove the griddle plate by lifting straight up. *(Caution the plate is very heavy)*
3. Remove the screw located at the rear of each burner. (Figure 1)
4. Remove the screw located under the front control panel which also holds the burner in place. (Figure 2)
5. Carefully remove the 10mm nut that holds the thermocouple in place on each burner (Figure 3). *Note the position of the thermocouple as it is important to replace in the same position later.*
6. Lift up the rear of the burner just enough to pull it backwards and set it aside to gain access to the orifice located in the front control panel. **Be cautious** of the igniter wire and ceramic tip which are still attached and are fragile.
7. Using a 7mm socket, gently remove the original orifice (Figure 4) and replace it with the natural gas one. The NG orifice (hole) is slightly larger than the LP due to the properties of the gas.
8. Carefully put the burner back in place and reinstall the rear screw to attach the burner. Reinstall the thermocouple and nut, mounting it back to the bracket. Careful to not over tighten. Reinstall the front burner screw to the control panel. Repeat on each burner.
9. Make sure all knobs are in the off position. Connect your natural gas supply and check for leaks.
10. Reinstall your drip tray and lid, then you are ready to enjoy your Le Griddle.

Figure 1

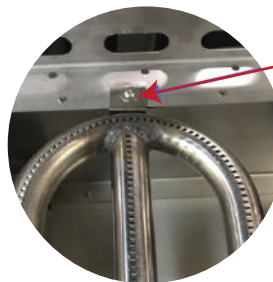

Remove
Screw

Figure 2



Remove
Screw

Figure 3



Remove nut from thermocouple. Then pull the thermocouple out from the bracket. *Note the position of the tip of the thermocouple before doing so.*

Figure 4



Remove
Orifice